



Ultra HD Digital Microscope U30/U30s



Configurable, Ergonomic Optical Inspection System

4K Digital Microscope powered by INSPECTIS®

- Premium imaging quality available in two industrial grade form factors, U30 and U30s
- Ultra HD 8.3 megapixel 30fps camera for careful inspection of fine detail
- Superior 30:1 zoom lens with fast auto-focus and iris control
- Pre-calibrated optics with zoom tracking and direct camera control in INSPECTIS® software
- Designed for outstanding optical performance at entire field of view
- Options include 500mm, and 1000mm extended working distance, 3000mm extended cable, ESD-protected housing, hermetic sealed housing, and a built-in laser pointer options



"Ultra Resolution, Ergonomic, Endlessly Versatile!"

Designed for ergonomic use

Inspectis Ultra HD digital microscopes provide relief to eyes, neck and shoulders through the unique ergonomic design and 228 mm free working distance. By allowing operators to sit comfortably in a good working position, their inspection tasks can be carried out more efficiently.



U30, All-in-one 4K system with advanced remote control


Thanks to its sensitive image sensor and superior optics, U30/U30s provide astonishing sharp images of the objects with minimum glare and colour fringes at entire field of view.



The system's standard optics produces ~ 2 - 60x magnification (28" monitor). If further magnification is needed, a wide range of diopter Macro Lenses can be added to magnify up to 178x.

Inspectis digital microscopes offer true ease of use with minimal interaction needed with controls and settings. All basic parameters such as zoom, brightness and colour levels can be controlled by the user through on-board buttons on top of the device.


An optional built-in laser pointer aims at the area of interest and assists in locating it on the screen.

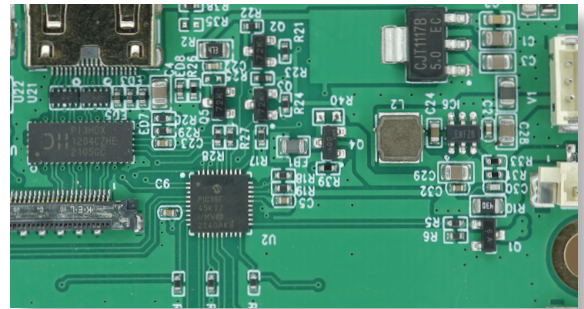

Electronics IC, x5 Zoom, 10x Mag.



Micro mechanics, x7.6 Zoom, 12x Mag.

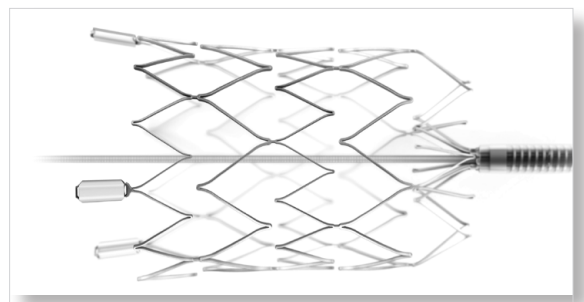

Medtech, x20 Zoom with +5 Macro, 64x Mag.



Forensic, x20 Zoom, 31x Mag.

"Optimised for accurate inspection of Medical Devices"

Making optical inspection enjoyable

Connect a U30 digital microscope to a 4K UHD display or your PC via Inspectis' plug-&-play USB3.0 or PCIe converter and take advantage of the astonishing image resolution, high contrast, true colours at 1:30x zoom range in your optical inspection work.

The Inspectis U30 and U30s digital microscopes can significantly reduce the time you spend on inspecting parts compared with other optical visual systems.



- 1:30x Zoom Optics
- AutoFocus
- On board Controls
- Aluminium Housing
- HDMI Digital Output
- Red Laser Pointer
- Modular Design
- ESD Protected
- Stable Stands
- USB3.0/PCIe Captures
- Wide range of accessories
- Advanced Remote Controllers



The Inspectis 4K Digital Microscopes are available in two basic models:

U30, an all-in-one, plug-and-play system with integrated aluminium stand and built-in adjustable white LED illumination.

U30s, a stand-alone, totally configurable system with a variety of mounting solutions. Select between any of Inspectis' Boom type, XY-type or Articulated arm stands.



U30 with Antistatic body



U30s with Single-arm Boom Stand

"Designed according to Industry Standards"

System Specifications

System:

Video Output	Ultra HD 2160p/30, switchable to Full HD 1080p/60
Imager	8.5 Mpixels. 3840(H) x 2160(V) 16:9 format. Progressive scan CMOS image sensor
Pixel Size (resolution)	1.62 µm x 1.62 µm
I/O Ports	HDMI video output, 5P MiniDin Power input, 8P MiniDin External Remote Control
On-board Control	Zoom, Iris, Auto Focus on/off, White Balance, 4K to Full HD format swap.
External Remote Control	Zoom, Iris, Manual/Auto Brightness, Manual/Auto Focus, White Balance, Picture Quality Mode, Display Text, Haircross overlay, Image Rotate, Image Freeze, Memory Save/Recall (2 pcs), Foot-switch, Video Output Format and Frame Rate.
Illumination	Integrated Long-life 18x ultra bright pure white LEDs with direction adjustment (U30 model). Optional Ringlight (U30s model)
Storage Environment	-20 ° – +60 °C, 20 - 95% RH, non-condensing
Operating Environment	-5 ° – +40 °C, 20 - 95% RH, non-condensing
Size, Weight U30	395 x 240 x 360 mm including metal base, 4.5 kg. including metal base
Size, Weight U30s	φ 86.5 x 137mm exclusive cable. 0.78 kg. excluding cable and stand

Optics:

Optical system	30x Zoom with Auto Focus and Iris Control
Working distance	228 mm (from lens to object at maximum zoom factor)
Magnification x1-x30 zoom factor	~ 2.0x ~ 60x on 28" monitor (~ 192x with +10 macro lens)
Field of View at x1-x30 zoom factor	~ 297 x 167 mm to ~ 9.9 x 5.6 mm (~ 3.2 x 1.8mm with +10 lens)
Laser pointer	Red LED with automatic through-optics alignment



Ordering numbers Inspection Systems:

Item name	Order No.		
Inspectis U30, 4K 2160p Digital Microscope, Integrated Stand, LED, HDMI	HD-015	Ring Light White LED with detachable diffuser	HD-024-B
Inspectis U30s, 4K 2160p Digital Microscope, Modular, HDMI	HD-016	Polarization filter set for Ring Light, 67mm	HD-024-P-U
With Antistatic housing	* -E	Ring Light UV 365-375nm wavelength LED	HD-025
With Laser Pointer	* -L	4K HD USB3.0 Capture with software Basics	HD-043
		4K HD USB3.0 Capture with software Pro	HD-044
		4K HD USB3.0 Capture with software ProX	HD-044-PX
		4K HD PCIe Capture	HD-035

Ordering numbers optional Accessories:

Remote Camera Control, Advanced Adjustments	HD-020	XY Floating Board, Antistatic	HD-028
Foot switch for Remote Camera Control	HD-027	XY Floating Board with position lock, Antistatic	HD-028-L
Macro lens +3 diopter, 67mm (Achromatic)	HD-038	Tilt Board, Antistatic	HD-029
Macro lens +5 diopter, 67mm (Achromatic)	HD-039	Single-arm Boom stand	HD-060
Macro lens +10 diopter, 67mm (Achromatic)	HD-123	Double-arm Boom Stand	HD-070
Inspectis High Magnification lens +28 diopter	HD-142	Articulated-arm Boom Stand	HD-080
Inspectis High Magnification lens +56 diopter	HD-143	Rack-&-Pinion Fine Focusing module	HD-090
Lens protection filter, 67mm	HD-098	Track stand, Large Base with focusing WD 35-410mm	HD-210-LB-E
		XY-travel Stand, In-line / Table-top	HD-170/180
		Aluminium carrying case	HD-040

Reseller:



ATEcare Service GmbH & Co. GmbH
Neufeldstr. 14
D-85232 Bergkirchen
+49 8131 318 575-120
info@atecare.com

Kontakt Schweiz:
ATEcare Alexander Hoertner
Friedhofweg 5
CH-9434 Au SG
+41 71 740 10 90
info@atecare.net

Internet:
www.atecare.com



Quality of Inspection

Inspectis Optical Systems
Stockholm, Sweden
www.inspect-is.com
info@inspect-is.com