



ATE CARE  
AUTOMATIC TEST EQUIPMENT

Industrial CT&X-ray  
Inspection Solutions Provider

# CX7000L

X-Ray SMD Chip Counting System



# CX7000L

ATE CARE  
AUTOMATIC TEST EQUIPMENT




## Application Fields

Reels	Accuracy	Others Components	Accuracy
01005	99.99%	Transistors	99.99%
0201	99.99%	Bulks	99.99%
0402	99.99%	ESD Packages	99.9%
0603	99.99%	Tube	100%
0805	99.99%	JEDEC TRAY	100%
1206	99.99%	Other Resistance & Capacity	99.99%

## Functions and Features




**1** Fingerprint Access Management and Real-time Monitoring of Radiation

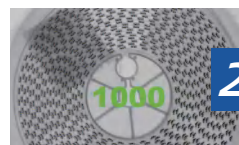

**2** Anti-interference Counting



**3** Embedded Sensors for Identifying Reels

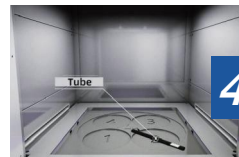

**4** AI Technology for Counting




**5** Intelligent QR Reading System




**6** Full Anti-pinch Hand System

## Inspection Images

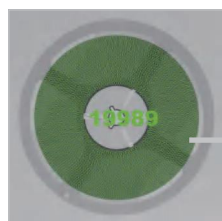

01005

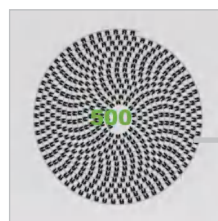


Chips




Abnormal Components



ESD / HSC

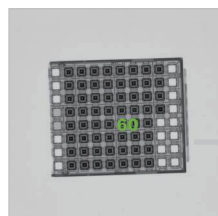

TRAY

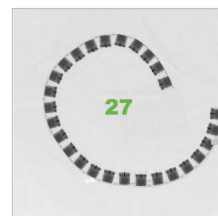

Bulks

## Technical Parameters and Specifications

### System Summary

Footprint	800(W)×1380(D)×1950(H)mm	Plywood Packing Size	900(W)×1460(D)×2090(H)mm
Machine Weight	674 kg	Packing Weight	746 kg
Power Supply	AC 110/220V, 50/60Hz	Power Consumption	Max. 1.5kW

### X-Ray Tube

Voltage	80kV	Current	700μA
Tube Type	Sealed	Focus Spot Size	0.03mm

### Imaging Detector

Detector	Flat Panel Detector (FPD)	Pixel Size	139 μm
Effective Inspection Area	430*430mm	Frame Rates	2 fps
Pixel Matrix	3072*3072 pixel	AD Conversion	16 bits

### Inspection Ability

Tape & Reel size	7"-17"
Scan Height	≤ 80mm
Inspection Min. Component	01005
Inspection Accuracy	≥ 99.99%
Inspection Speed	< 10s/Tape & Reel (7"-17") < 10s(7" *4Tape & Reel)

### Industrial PC


Monitor	27" FHD LCD Display
System OS	Windows 10 64bit
Hard Disk	256G (SSD) + 1T (HDD)
RAM	16 GB
CPU Model	Intel i7 Processor
Support Connection with MES, ERP and WMS Intelligent Storage System.	

### Other Features

Door Open	Auto-door, Anti-Pinch	Feeding Method	Manual
Radiation Monitoring	Safety Protection, Real-time Monitoring of Radiation	X-Ray Safety	≤0.5μSv/h (Meets All International Standards)
Accessories	Embedded barcode camera reader, hand-held barcode scanner	Authority Management	Fingerprint Access Management System, and Support Password Accessing.

\* Specifications are subject to change without notice, All trademarks are the property of the system maker.

## Dimensions and Appearance

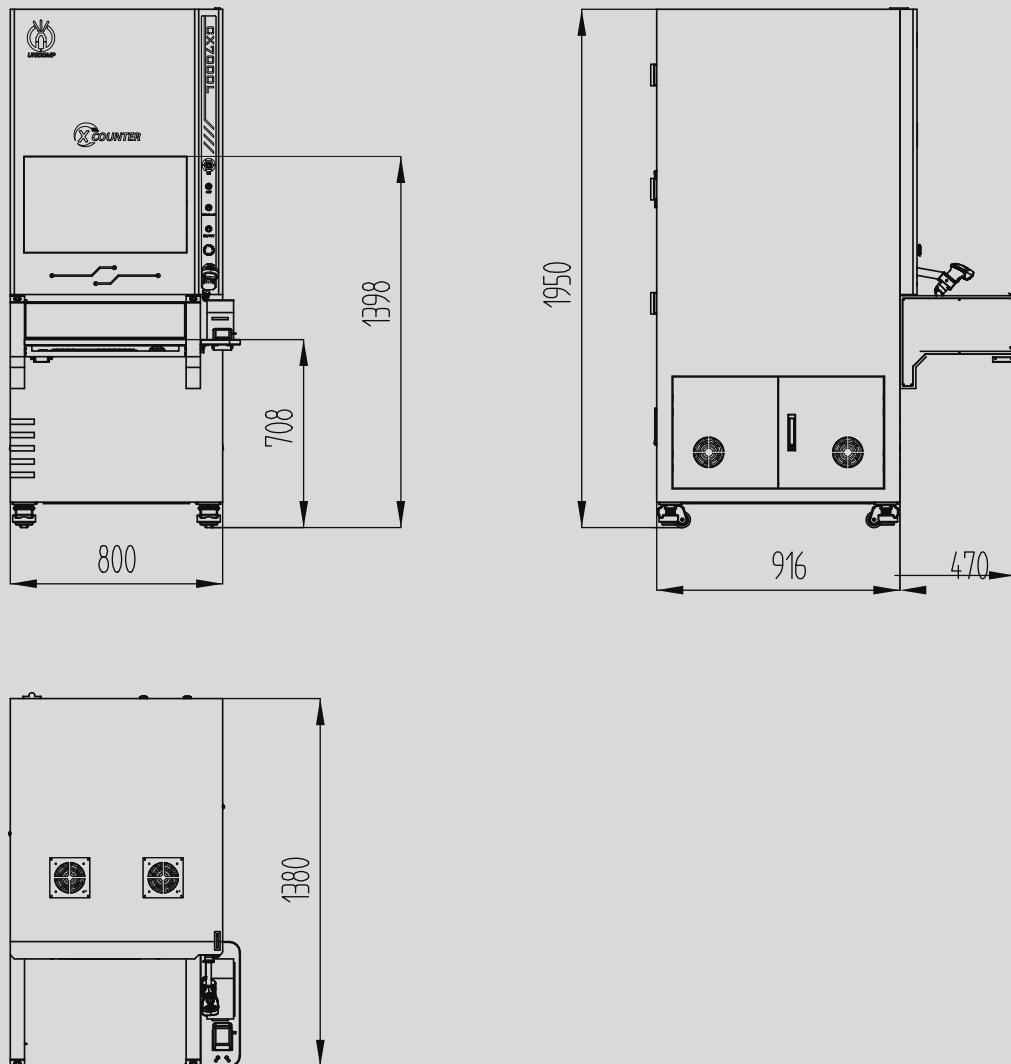

Vertrieb im deutschsprachigen Raum:

**ATE CARE**  
AUTOMATIC TEST EQUIPMENT

ATEcare Service GmbH & Co. KG  
Neufeldstr. 14  
D-85232 Bergkirchen

Tel.: +49 8131 318 575-120  
Fax: +49 8131 318 575-411

info@atecare.com  
www.atecare.de